
## **Expansion Units**


Plugged in via an appropriate Expansion Lead (see page opposite) or direct 'unit to unit' an Expansion Unit, as its name implies, simply expands the capacity of the preceding unit it is plugging into. For example plugging a 4-way Expansion Unit into an 8-way Starter Unit provides a combined unit of 12 ways. Clearly all connected luminaires will operate together, and it is useful to note that where using a plug-in control device it won't matter which outlet or which unit it is plugged into.

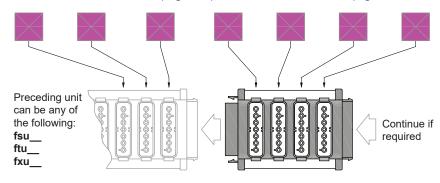


For details on plugs and pre-wired luminaire leads see page 21 onwards



Note: All luminaires will be controlled as one. If using a plug-in control device it can be plugged into any spare outlet on the run. For details on plug-in control devices see page 33

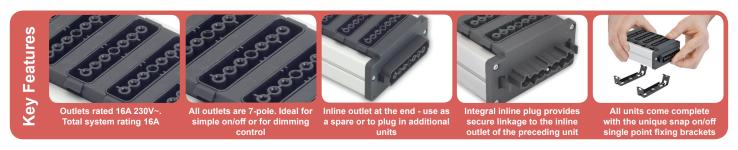

Technical details - page 55

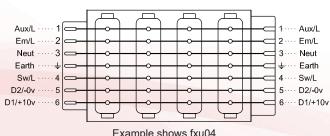

Example shows fxu04

