
3, 4, 5 & 6-Core Extender Leads

For greater flexibility wire a short Luminaire Lead or a Panel Mounted Plug (see page 31) to the luminaire and leave the Extender Lead the job of covering the distance back to the supply socket. Now luminaire manufacturers and electrical contractors can confidently wire up luminaires prior to installation without the risk that the lead may be too long or, more problematically, too short because the correct length Extender Lead can be selected and fitted after the luminaire is in place. This solution is particularly useful if the specification calls for a means of disconnection close to the luminaire.

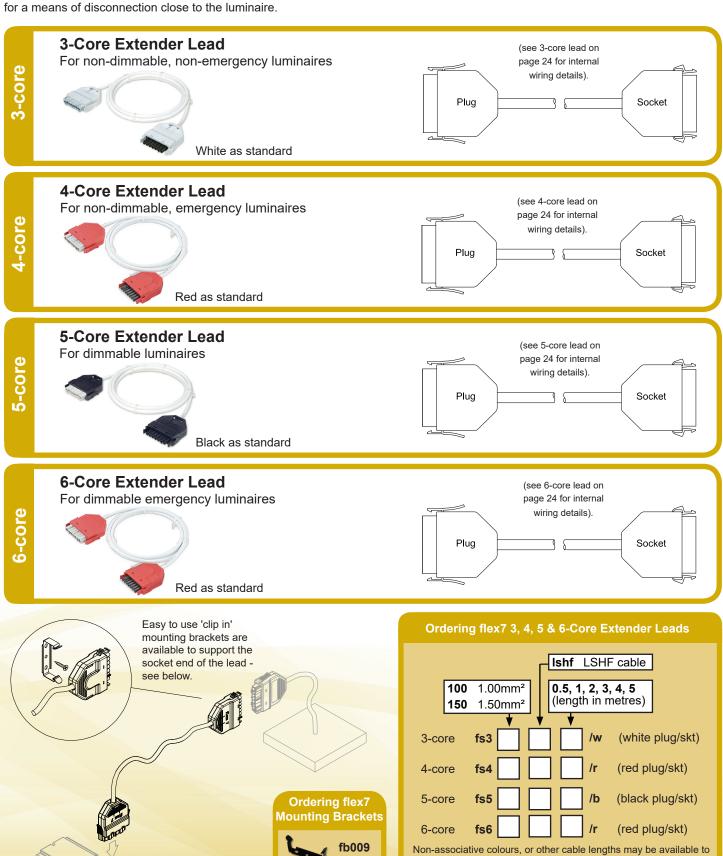

special order