Installation Instructions

Installing a **flex7** trunking mounted socket outlet

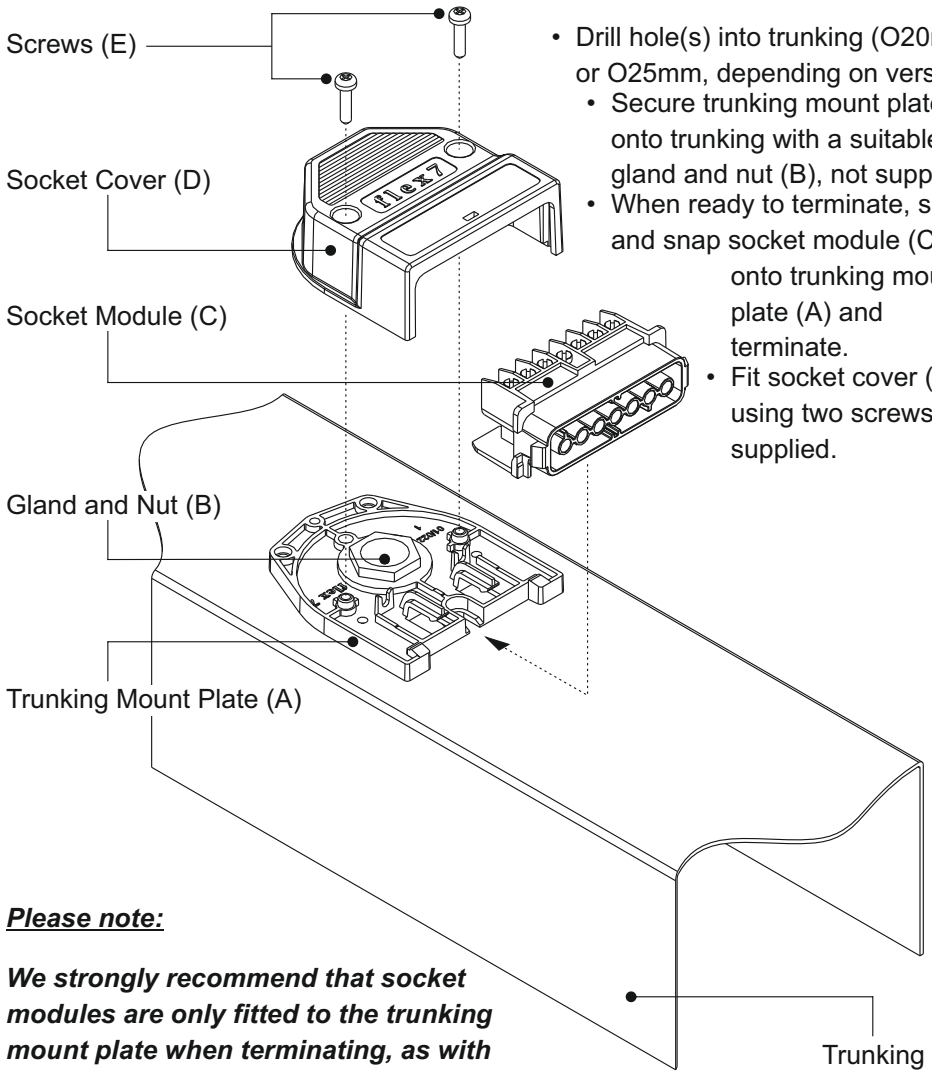

- Drill hole(s) into trunking (O20mm or O25mm, depending on version).
- Secure trunking mount plate (A) onto trunking with a suitable gland and nut (B), not supplied.
- When ready to terminate, slide and snap socket module (C) onto trunking mount plate (A) and terminate.
- Fit socket cover (D) using two screws (E) supplied.

Please note:

We strongly recommend that socket modules are only fitted to the trunking mount plate when terminating, as with the socket cover removed, drilling vibrations can cause unterminated terminal screws to fall out.

Installation Instructions

Installing a **flex7** single socket outlet onto a conduit box

NB:

Standard wiring details are located on the underside of the socket cover (C).

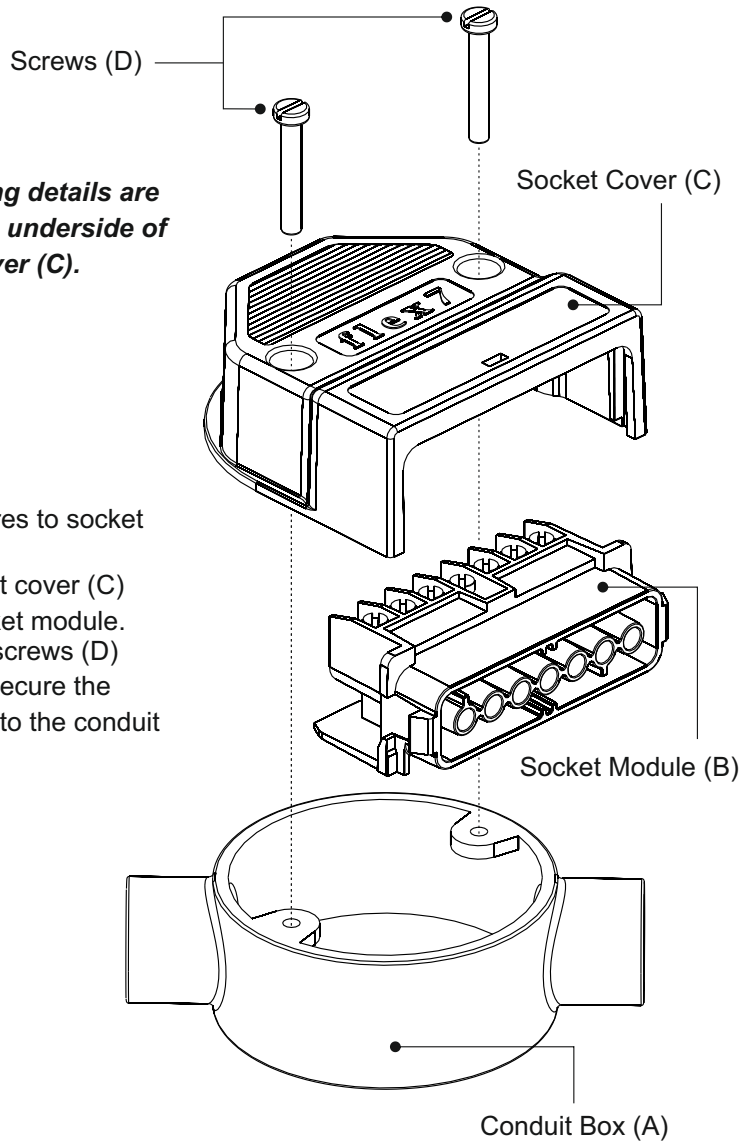

- Terminate wires to socket module (B).
- Locate socket cover (C) over the socket module.
- Use the two screws (D) supplied, to secure the socket cover to the conduit box (A).

This product should only be installed by a qualified electrician

flex7 Limited, Ruscombe Business Park, Ruscombe Lane, Twyford, Berkshire RG10 9JW, UK
Telephone: +44 (0) 20 8580 1066 **Fax:** +44 (0) 20 8580 1062
Website: www.flex7.co.uk **Email:** info@flex7.co.uk
Leaflet reference number: **22/053** issue **2** 22/03/2025