


The fnc4000(D,X or A)/AB, are all control devices that can plug directly into any of the range of connection units or a 7-pole single socket outlet. Working with at least a switch or together with a plug-in sensor head, the device will control the connected mains rated luminaires ON, OFF and DIM up or down. The exact operation will largely depend on which of the input devices are connected. Note that any connected switch or sensor head will be operating at ELV.

Three products are available:
 fnc4000D/AB : DSI digital dimmable ballasts.
 fnc4000X/AB : DALI digital dimmable ballasts.
 fnc4000A/AB : Analogue ballasts 0-10V.



Please ensure the correct product is selected for the type of ballast being used as incorrect connection may damage the controller.

This product should only be installed by a qualified electrician.

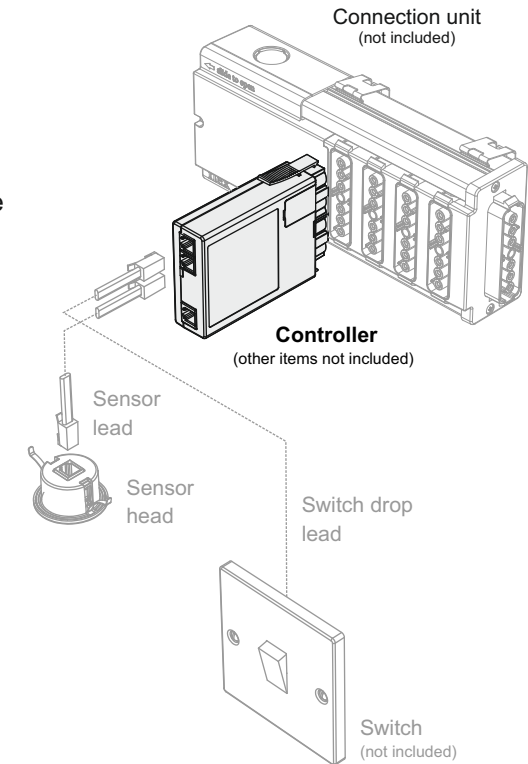


Configuring the fnc4000(D,X or A)/AB controller

Prise open lid 'C' using a screw driver. Position link as required.

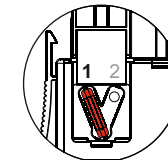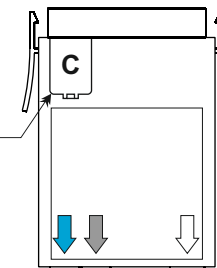

Link in position 1

Lights can remain ON during an emergency test. Wire connection unit as shown on the back page.

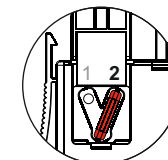

Link in position 2

Lights will switch OFF during an emergency test. Wire connection unit as shown on the back page.

Supply Voltage :Nominal 230V~ 50Hz	IP Rating :IP20
Type :Class 2	Compliance :2014/35/EU
Material :PA6 UL94 V-0 rated, Non-halogen	:2014/30/EU
Operating range :-10°C to 40°C	Max No. DALI :up to 25 DALI
Switched Load :6A	
Peak Inrush :120A (duration <20mS)	



flex7 Connectors Limited, Ruscombe Business Park, Ruscombe Lane, Twyford, Berkshire RG10 9JW, UK

Telephone: +44 (0) 20 8580 1066 Fax: +44 (0) 20 8580 1062



Website: www.flex7.co.uk Email: info@flex7.co.uk

Leaflet reference number: 22/017 issue 8 04/03/2025



Using a fnc4000(D, X or A)/AB controller with a switch (dimming)

* Refer to leaflet *Networking Sensors*, leaflet number 17/245.

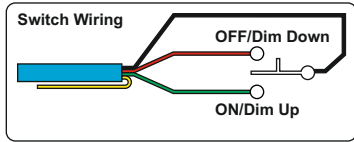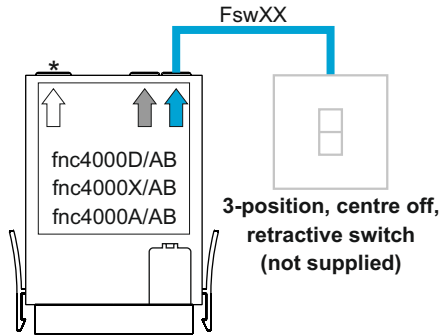

Note:
Multiple switches can be connected in parallel. 'Y' connectors are available to enable two switch drop leads to be connected into one point. (Part No. fsy/A - adaptor)


Operation:

Switch control:


ON pulse - turns the lights ON (to the last dimmed level).
 OFF pulse - turns the lights OFF.
 A long ON pulse - brightens lights (eventually to maximum).
 A long OFF pulse - dims lights (eventually to minimum, but should the pulse exceed 15 secs the lights will switch OFF completely).

Using fnc4000(D, X or A)/AB controller with a sensor head and switches

* Refer to leaflet *Networking Sensors*, leaflet number 17/245.

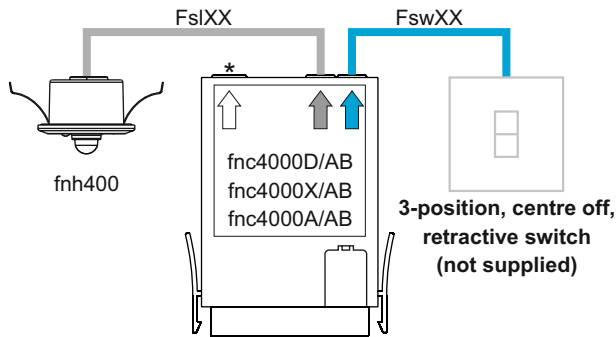

Note:
For best operation it is advisable that occupancy coverage extends to cover the wall switch.

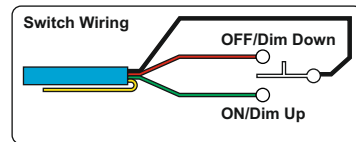

Note:
Multiple switches can be connected in parallel. 'Y' connectors are available to enable two switch drop leads to be connected into one point. (Part No. fsy/A - adaptor)

Note: Alternative operational options not necessarily shown above are available using the frc/set setup remote control. Full instructions for setting up the sensor are supplied with the sensor head and the frc/set remote control - both ordered separately.

Operation:

ON pulse - turns the lights ON with *daylight linking* activated.
 OFF pulse - turns the lights OFF.
 A long ON pulse - brightens lights (eventually to maximum).
 A long OFF pulse - dims lights (eventually to minimum, but should the pulse exceed 15 secs the lights will switch OFF completely). Additionally, if the lights are subsequently ramped up or down by the switch, *daylight linking* will be deactivated in preference to the DIM state attained by the switch.

Absence detection:

When occupancy is no longer detected, lights will switch OFF after a pre-selected *time-out* period (default 20 minutes).

Daylight linking: Provided *daylight linking* is activated (see switch control above) the light output will adjust to compensate for any changes in ambient light in order to maintain a constant light level under the sensor head - the *target level*.

Circuit diagram for the fnc4000(D, X or A)/AB controller

